

Antenna with multiband antenna

V type doublet



Coaxial cable of
arbitrariness length

Do by " Impedance measurement"
when you adjust the antenna with
the feeding power point.


GP



Make to " SWR measurement ", and adjust it in the point that SWR lowers most
when you adjust an antenna the entire system including the feeder.
Adjust it from a high frequency when you adjust the length of the antenna.



Gamma-match, and ω match

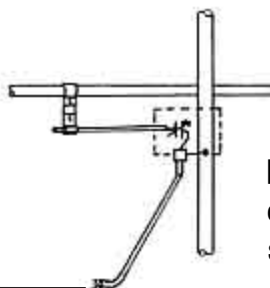

Do by " Impedance measuerement "
of the measurement function switch
switch of this machine.

- △ A meter of high sensitivity and precise parts must be used, and this machine must note the high impact and the fall enough.
 - △ Never put an external signal (output and voltage of the transmitter) in the terminal ANT of this machine. The circuit is damaged by fire.
 - △ It causes the malfunction and damage when it is transmitted in the vicinity while using this machine, and note it.
 - △ Note not getting wet because of rain and water.
 - △ It must not be completely adjusted when it ships it, and this machine must not spend an internal trimmer and etc.
- The circuit and the constant might be changed without a previous notice for the performance improvement.